



X-ENP-19 L15



X-ENP-19 L15 02










2030385-2026.04.09



Hilti Corrosion
Handbook
DFTM

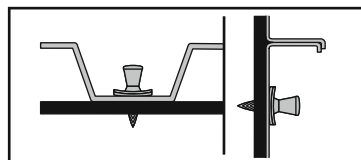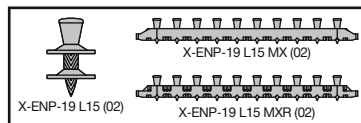

X-ENP-19 L15 MXR (02)	DX 9-ENP / DX 9-ENP W DX 860-ENP	6.8/18 M40
X-ENP-19 L15 MX (02)	DX 76 MX / PTR DX 8 MX / PTR	6.8/18 M10
X-ENP-19 L15 (02)	DX 76 F15 DX 8 F15	

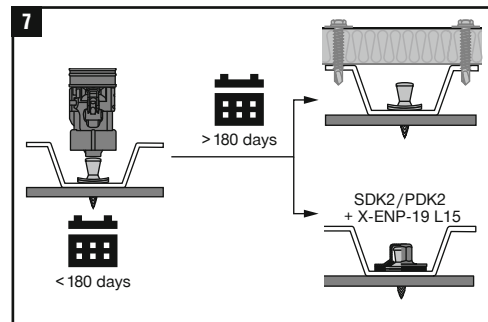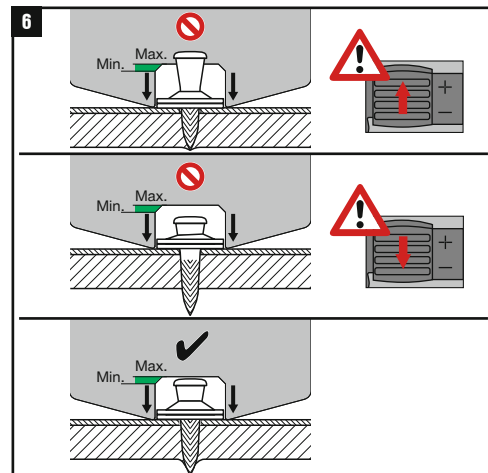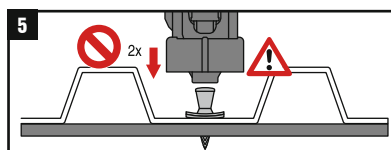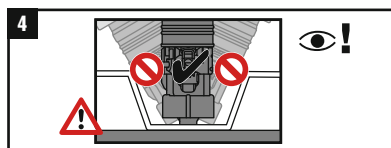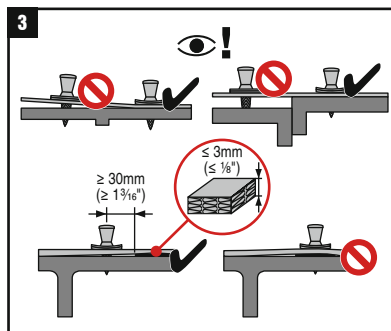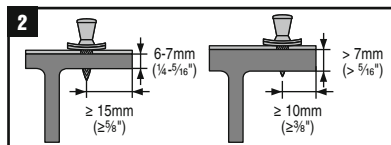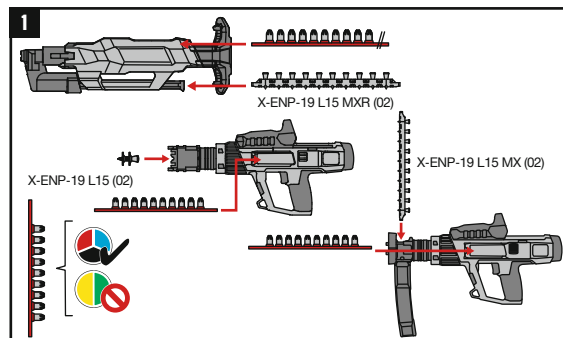



2030385-2026.04.09

X-ENP-19 L15

X-ENP-19 L15 02

