

Electrolux


electrolux.com/register

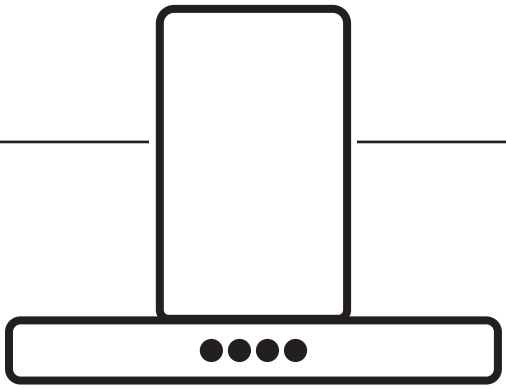

LFP716W
LFP716X
LFP726W
LFP726X

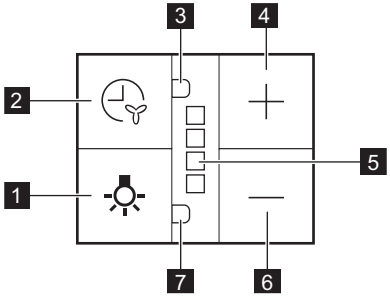

NOISES

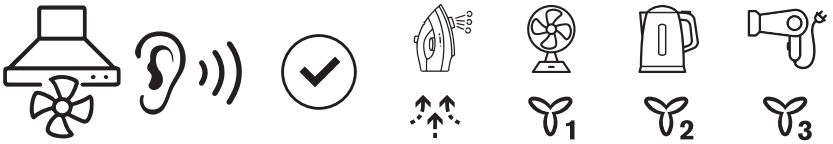

Subject to change without notice.

EN | 1. SAFETY INFORMATION AND INSTALLATION

⚠ **WARNING!**
Refer to the separate Installation Instructions booklet for Safety Information and Installation.

⚠ **WARNING!**
Read carefully the Safety chapters before any use or maintenance of the appliance.

2. DAILY USE

2.1 Control panel functions

Refer to the illustration of the control panel overview at the beginning of this manual.

ⓘ To access the control panel, open the hood drawer by more than 5 cm.

1	**Lamp** - Press to activate or deactivate the light. The light operates independently of other functions. Closing the drawer does not affect the light.
2	**Delayed switch off** - Allows the fan to deactivate automatically after a set time. Set the desired fan speed and then press this button. Press the button again to deactivate the function. Fan deactivation time: **first speed** - 20 min, **second speed** - 15 min, **third speed** - 10 min, **fourth speed** - 8 min. Changing the speed or closing the drawer deactivates the function.
3	**Delayed switch off indicator** - Indicates that the function is active.

4	+ **Speed up button** - Press to turn on the hood. Press again to increase the speed level.
5	**LED indicators** - Indicate speed levels. Use: **first speed** for heating food or cooking with covered pots; **second speed** for cooking with covered pots on multiple cooking zones or burners, gentle frying; **third speed** for boiling or frying large amounts without a lid or for cooking on multiple cooking zones or burners; **fourth speed** for boiling or frying large amounts without a lid in high humidity, after 8 min the hood returns to the previous speed.
6	— **Speed down button** - Press to decrease the speed level. To turn off the fan press the button repeatedly until the fan stops or close the drawer.
7	**Filter notification indicator** - Reminds to clean the grease filter and to replace or clean the carbon filter. Refer to Filter notification.

ⓘ It is recommended to run the hood for about 15 min before and after cooking.

ⓘ Closing the drawer saves the last speed setting. Opening the drawer starts the hood at the last selected speed.

2.2 Filter notification

Clean the grease filter, when the indicator blinks red regularly for 30 sec. Replace or clean the carbon filter, when the indicator blinks red two times per second for 30 sec.

ⓘ The function activates after operating for 40 h (grease filter) and 160 h (carbon filter).

ⓘ During the alarm, the fan does not operate. After 30 sec, the fan operates at the last set speed.

ⓘ The function counter for the carbon filter is deactivated by default. Activate it for recirculation mode.

To activate or deactivate the counter for the carbon filter press for 3 sec when the fan is turned off. The function is activated when second speed indicator flashes white for 3 sec and deactivated when first speed indicator flashes white for 3 sec.

To reset the counter when the notification is active press for 3 sec.

To reset the counter when the notification is inactive press for 3 sec for grease filter and — for carbon filter when the fan is turned off. The indicator blinks once to confirm the reset.

3. CARE AND CLEANING

3.1 Cleaning the hood

- Clean the hood every month to prevent surface damage.
- Do not use abrasive detergents or brushes. Clean the hood surface with a soft cloth, warm water and a mild detergent.
- Clean the interior and the grease filters to remove grease. Grease or other residues can cause fire.
- After cooking, some hood surfaces can become hot. Allow the hood to cool. Dry the surfaces with a clean cloth or paper towels to prevent stains.
- When the filter indicator illuminates, clean the grease filters and replace or regenerate the carbon filter. Refer to Daily use.

3.2 Cleaning the grease filter

IMPORTANT

Follow the icons in the separate Installation instructions booklet for removing and refitting the grease filter.

- Clean the grease filter by hand (recommended) with a sponge and a non-abrasive detergent, or in the dishwasher.
- Set the dishwasher to a low temperature and a short cycle. Grease-filter discolouration does not affect hood performance.

3.3 Replacing the carbon filter

ⓘ For models supplied **with a carbon filter**, refer to the information below.

- The saturation time of the carbon filter varies with the type of cooking and the frequency of cleaning the grease filter.
- The carbon filter is not washable or regenerable. Replace it every 4-6 months, or more often with heavy use.

➲ IMPORTANT

Follow the icons in the separate Installation instructions booklet for removing the old carbon filter and installing the new one.

ⓘ For models supplied **without a carbon filter**, purchase the carbon filter separately. Some filters are washable or regenerable, others are not. Refer to the leaflet supplied with the filter.

3.4 Replacing the lamp

The hood is supplied with a LED lamp. This part can be replaced by a technician only. In case of any malfunction refer to Service in the Safety Instructions chapter (separate Installation Instructions booklet).

4. TROUBLESHOOTING

⚠ **WARNING!**
Refer to Safety chapters.

4.1 What to do if...

You cannot activate the hood

- Check if the hood is correctly connected to the power supply.
- No power supply. Check the fuse or the main switch. If the fuse or the switch continues to break the circuit, contact a qualified electrician.
- Check if the cabinet doors are aligned with the cabinet frame.

The lamp does not operate

- The lamp is defective. Contact an Authorised Service Centre.

Poor vapour extraction

- The fan speed is too low. Increase the fan speed.

5. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol ♺. Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.