

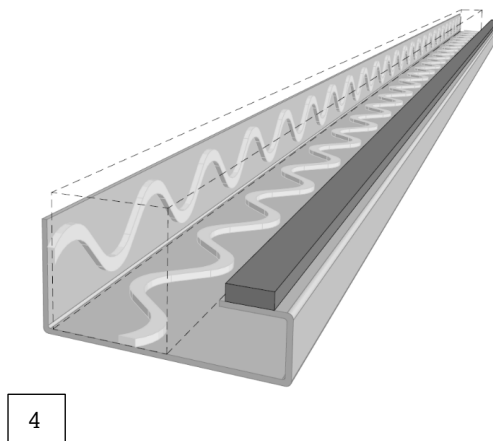
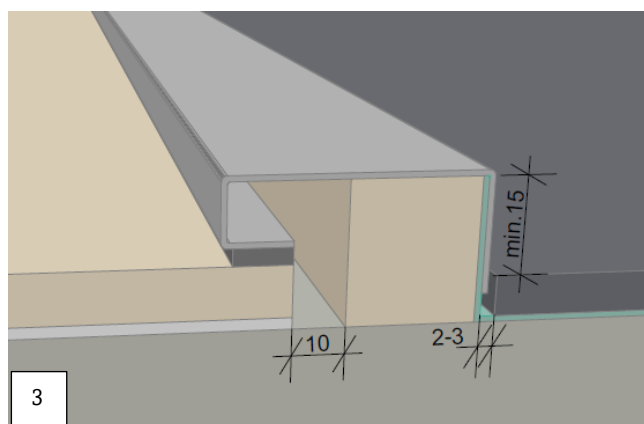
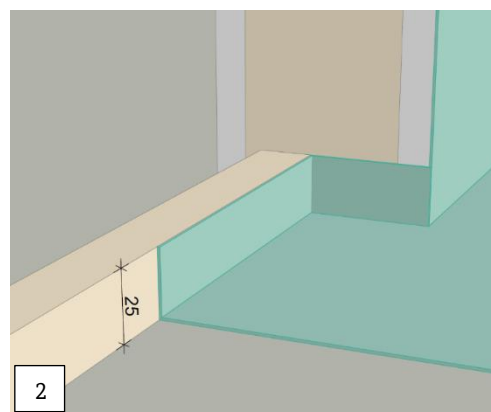


1. PUHDISTA BETONIPINTA PÖLYSTÄ JA MUUSTA LIASTA OVIAUKON KOHDALTA, JOHON KYNNYSRUNKO ASENNETAAN.
2. KÄSITTELE BETONIPINTA TARTUNTAPOHJUSTEELLA ALUEELTA, JOHON KYNNYSRUNKO LIIMATAAN.
3. LIIMAA KYNNYSRUNKO OVEN AUKEAMISSUUNNAN MUKAAN (KUVAT 1A JA 1B). **HUOM!** KYNNYSRUNKOA ASENTAESSA TULEE VARMISTUA, ETTÄ MÄRKÄTILAN PUOLELLA TULVAKORKEUS (MIN. 15 MM) VALMIISTA PINNASTA TÄYTYY. KÄYTÄ TARVITTAESSA MUKANA TULEVIA KOROTUSPALOJA. KOROTUSPALAT ASENNETAAN KYNNYSRUNGON ALLE. KYNNYSRUNKO TULEE VAAITA ASENTAESSA KAIKKIIN SUUNTIIN SUORAAN. KYNNYSRUNGON LIIMAUKSESSA TULEE KÄYTTÄÄ NOTKEAA ASENNUSLIIMAA (ESIM. SOUDAL FIX ALL TURBO).
4. VESIERISTÄ MÄRKÄTILAN PUOLI KYNNYSRUNKOA VASTEN NIIN, ETTÄ VESIERISTE YLETTY YKNNYSRUNGON YLÄPINTAAN SAAKKA (KUVA 2).
5. ASENNA LATTIAMATERIAALI KUIVAAN TILAAN JÄTTÄEN LATTIAMATERIAALIN JA KYNNYSRUNGON VÄLIIN NOIN 10 MM ELÄMISVARA. MÄRKÄTILAN PUOLEN LAATOITUS TULEE JÄTTÄÄ VESIERISTEEN PINNASTA IRTI 2-3 MM, JOTTA RST-KYNNYSLISTA MAHTUU KYNNYSRUNGON JA LAATAN VÄLIIN (KUVA 3).
6. VARMISTA, ETTÄ RST-KYNNYSLISTAN LIIMATTAVAT PINNAT OVAT PUHTAAT JA RASVATTOMAT. PUHDISTA MYÖS KYNNYSRUNGON LIIMAPINNAT HUOLELISESTI PÖLYSTÄ JA TAHROISTA. LEVITÄ LIIMA KYNNYSLISTAN KAHTeen SIVUUN (KUVA 4). PAINA RST-KYNNYSLISTA HUOLELISESTI KYNNYSRUNKOA VASTEN. ASENNA RUUVIT KYNNYSLISTAN PÄISSÄ OLEVIIN REIKIIN JA POISTA RUUVIT LIIMAN KUIVUTTUA. RST-KYNNYSLISTAN LIIMAUKSESSA TULEE KÄYTTÄÄ NOTKEAA ASENNUSLIIMAA (ESIM. SOUDAL FIX ALL TURBO).
7. ASENNUS ON VALMIS.

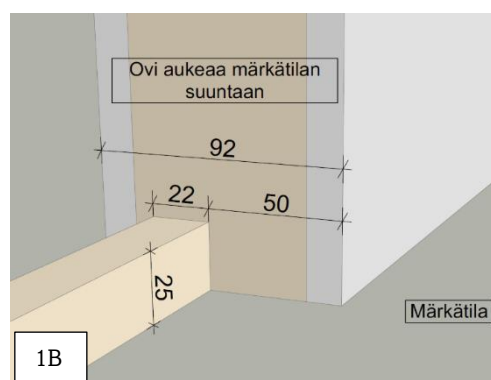

1. CLEAN THE CONCRETE SURFACE FROM DUST AND OTHER DIRT AROUND THE DOOR OPENING WHERE THE THRESHOLD FRAME WILL BE INSTALLED.
2. TREAT THE CONCRETE SURFACE WITH A PRIMER IN THE AREA WHERE THE THRESHOLD FRAME WILL BE ADHERED.
3. GLUE THE THRESHOLD FRAME IN THE DIRECTION OF THE DOOR OPENING (SEE PICTURES 1A AND 1B). **NOTE!** WHEN INSTALLING THE THRESHOLD FRAME, MAKE SURE THAT THE FLOOD HEIGHT (MIN. 15 MM) FROM THE FINISHED SURFACE IS ACHIEVED ON THE WET AREA SIDE. IF NECESSARY, INSTALL THE INCLUDED SPACER PIECES UNDER THE THRESHOLD FRAME. THE THRESHOLD FRAME SHOULD BE LEVEL IN ALL DIRECTIONS DURING INSTALLATION. USE A FLEXIBLE INSTALLATION ADHESIVE (E.G. SOUDAL FIX ALL TURBO) FOR GLUING THE THRESHOLD FRAME.
4. WATERPROOF THE WET AREA SIDE AGAINST THE THRESHOLD FRAME SO THAT THE WATERPROOFING EXTENDS UP TO THE TOP SURFACE OF THE THRESHOLD FRAME (SEE PICTURE 2).
5. INSTALL THE FLOORING MATERIAL IN THE DRY AREA LEAVING APPROXIMATELY A 10 MM EXPANSION GAP BETWEEN THE FLOORING MATERIAL AND THE THRESHOLD FRAME. THE TILING ON THE WET AREA SIDE SHOULD BE LEFT 2-3 MM AWAY FROM THE WATERPROOFING SURFACE SO THAT THE SS-THRESHOLD STRIP CAN FIT BETWEEN THE THRESHOLD FRAME AND TILE (SEE PICTURE 3).
6. MAKE SURE THAT THE SURFACES TO BE ADHERED ON THE SS-THRESHOLD STRIP ARE CLEAN AND GREASE-FREE. ALSO CLEAN THE ADHESIVE SURFACES OF THE THRESHOLD FRAME CAREFULLY FROM DUST AND STAINS. APPLY ADHESIVE TO BOTH SIDES OF THE THRESHOLD STRIP (SEE PICTURE 4). PRESS THE SS-THRESHOLD STRIP FIRMLY AGAINST THE THRESHOLD FRAME. INSTALL SCREWS INTO THE HOLES AT THE ENDS OF THE THRESHOLD STRIP AND REMOVE THE SCREWS ONCE THE ADHESIVE HAS DRIED. USE A FLEXIBLE INSTALLATION ADHESIVE (E.G. SOUDAL FIX ALL TURBO) FOR GLUING THE SS-THRESHOLD STRIP.
7. THE INSTALLATION IS COMPLETE.

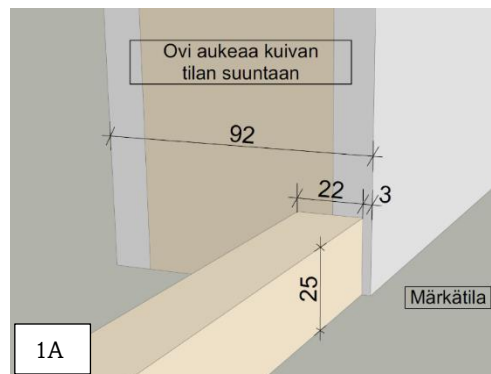